

# OMNITRONIC CMX-2000

## VirtualDJ 8 - Quick Operation Functions

NAME		ACTION	SHIFT ACTION
DECK CHG		Swaps left and Right Decks	Toggle Multi and Single Effect mode on both sides
FX1		Custom button 1	Unassigned
FX2		Custom button 2	Unassigned
FX1 ON/FX2 ON	FX mode	<u>Single Effect mode</u> Effect On/Off  <u>Multi Effect mode</u> Effect Slot 1 On/Off	<u>Single Effect mode</u> Open/Close FX GUI  <u>Multi Effect mode</u> Select next Effect for Slot 1
	Sampler mode	Triggers Sampler slot 1	stops Sampler slot 1
FX1/FX2 1 BUTTON	FX mode	<u>Single Effect mode</u> Select Previous Effect  <u>Multi Effect mode</u> Effect Slot 2 On/Off	<u>Single Effect mode</u> Effect Button 1  <u>Multi Effect mode</u> Select next Effect for Slot 2
	Sampler mode	Triggers Sampler slot 2	stops Sampler slot 2
FX1/FX2 2 BUTTON	FX mode	<u>Single Effect mode</u> Select Next Effect  <u>Multi Effect mode</u> Effect Slot 3 On/Off	<u>Single Effect mode</u> Effect button 2  <u>Multi Effect mode</u> Select next Effect for Slot 3
	Sampler mode	Triggers Sampler slot 3	stops Sampler slot 3
FX1/FX2 3BUTTON	FX mode	Reset Key	
	Sampler mode	Triggers Sampler slot 4	stops Sampler slot 4

FX 1/FX2 DRY/WET KNOB	FX mode	<b><u>Single Effect mode</u></b>	<b><u>Single Effect mode</u></b>
		Effect Parameter 1	Effect Parameter 4
		<b><u>Multi Effect mode</u></b>	<b><u>Multi Effect mode</u></b>
FX1 KNOB	FX mode	Effect slot 1 Parameter 1	Effect slot 1 Parameter 2
		<b><u>Single Effect mode</u></b>	<b><u>Single Effect mode</u></b>
		Effect Parameter 2	Effect Parameter 5
FX2 KNOB	FX mode	<b><u>Multi Effect mode</u></b>	<b><u>Multi Effect mode</u></b>
		Effect slot 2 Parameter 1	Effect slot 2 Parameter 2
	Sampler mode	Sampler Slot 2 Volume	
FX3 KNOB	FX mode	<b><u>Single Effect mode</u></b>	<b><u>Single Effect mode</u></b>
		Effect Parameter 3	Effect Parameter 6
		<b><u>Multi Effect mode</u></b>	<b><u>Multi Effect mode</u></b>
BROWSE ENCODER	Sampler mode	Effect slot 3 Parameter 1	Effect slot 3 Parameter 2
		Sampler Slot 3 Volume	
		Sampler Slot 4 Volume	
BROWSE PUSH		Scrolls through files or folders	Scrolls through files or folders
LOAD LEFT		If focus is on Folders, set focus to songs list. If focus is on Songs list, add track to Automix List	If focus is on Folders, open/close subfolders. If focus is on Songs list, add track to Sidelist List
LOAD RIGHT		Load track on Left deck (hold for more than 1 second to unload)	Set focus to next Browser Window
VFX/TX ENCODER		Load track on Right deck (hold for more than 1 second to unload)	Cycle through the Sideview windows
VFX/TX ENCODER PUSH		Adjust 1st Parameter of Video Transition	Adjust 1st Parameter of Video Effect
TX BUTTON		Open/Close FX GUI of Video Transition	Open/Close FX GUI of Video Effect
		Trigger selected Video Transition	Select Next Video Transition

FX BUTTON		Trigger selected Video Effect on Master	Select Next Video Effect on Master
VIDEO XF		Auto mode for Video crossfader	Record (led will blink)
XF LINK		Link mode for Video Crossfader	Start/stop Automix (led will blink)
LOOP IN		Sets Loop In (Entry) point	
	HotCue mode	HotCue 1	Delete HotCue 1
BEAT <<	Default mode	Jumps 4 beats backwards	Jumps to previous HotCue
	HotCue mode	HotCue 2	Delete HotCue 2
CUE	Default mode	Cue button	Sets Timeocode to Relative mode
	HotCue mode	HotCue 3	Delete Cue 3
PLAY	Default mode	Play/Pause track	Jumps to the beginning of the track
	Hotcue mode	HotCue 4	Delete Hotcue 4
LOOP OUT		Sets Loop In (Entry) point	
	Hotcue mode	HotCue 5	Delete Hotcue 5
BEAT >>	Default mode	Jumps 4 beats forward	Jumps to next HotCue
	Hotcue mode	HotCue 6	Delete Hotcue 6
CUP	Default mode	Cue button/Play when released	Sets Timeocode to Absolute mode
	Hotcue mode	HotCue 7	Delete Hotcue 7
SYNC	Default mode	Syncs with the other deck or Master Deck	Manually set the Master Deck
	HotCue mode	HotCue 8	Delete Hotcue 8
FADER START		Fader Start/Stop	